




VERSO, VERSO COMPACT, VERSO POLAR

Side-opening polycarbonate camera housing

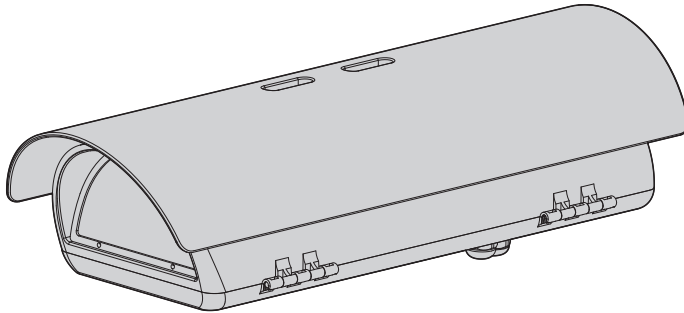

EN English - Instruction manual

IT Italiano - Manuale di istruzioni


FR Français - Manuel d'instructions

DE Deutsch - Bedienungsanleitung

RU Русский - Руководство по эксплуатации

VERSO, VERSO COMPACT, VERSO POLAR

Side-opening polycarbonate camera housing

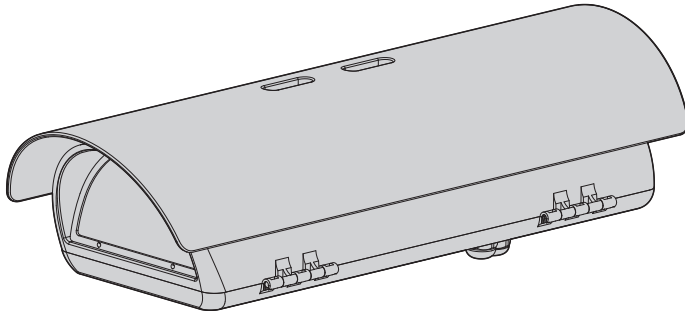

Contents

1 About this manual	5
1.1 Typographical conventions	5
2 Notes on copyright and information on trademarks	5
3 Safety rules	5
4 Identification	7
4.1 Product description and type designation	7
4.1.1 VERSO	7
4.1.2 VERSO COMPACT	7
4.1.3 VERSO POLAR	7
4.2 Product marking label	7
5 Preparing the product for use	8
5.1 Unpacking	8
5.2 Contents	8
5.3 Safely disposing of packaging material	8
5.4 Preparatory work before installation	8
5.4.1 Mounting the bracket	8
6 Installation	9
6.1 Housing opening	9
6.2 How to install the camera	9
6.3 Board description	10
6.4 Connecting the power supply	12
6.4.1 Type of cable	12
6.5 Installation of the version with double filter for air renewal	12
6.6 Desiccant bag	12
7 Accessories	13
7.1 Heater	13
7.1.1 Heater installation	13
7.2 Camera power supply	13
7.2.1 Camera power supply installation	13
7.3 Blower	14
7.3.1 Blower installation	14
8 Cleaning	14
8.1 Cleaning the window and plastic parts	14
9 Information on disposal and recycling	14
10 Technical data	15
10.1 VERSO	15
10.1.1 General	15
10.1.2 Mechanical	15
10.1.3 Electrical	15
10.1.4 Environment	15
10.1.5 Certifications	15

10.2 VERSO COMPACT	16
10.2.1 General.....	16
10.2.2 Mechanical	16
10.2.3 Electrical.....	16
10.2.4 Environment	16
10.2.5 Certifications	16
10.3 VERSO POLAR.....	17
10.3.1 General.....	17
10.3.2 Mechanical	17
10.3.3 Electrical.....	17
10.3.4 Environment	17
10.3.5 Certifications	17
11 Technical drawings	18

1 About this manual

Read all the documentation supplied carefully before installing and using this product. Keep the manual in a convenient place for future reference.

1.1 Typographical conventions



DANGER!

High level hazard.

Risk of electric shock. Disconnect the power supply before proceeding with any operation, unless indicated otherwise.



CAUTION!

Medium level hazard.

This operation is very important for the system to function properly. Please read the procedure described very carefully and carry it out as instructed.



INFO

Description of system specifications. We recommend reading this part carefully in order to understand the subsequent stages.

2 Notes on copyright and information on trademarks

The mentioned names of products or companies are trademarks or registered trademarks.

3 Safety rules



CAUTION! Device installation and maintaining must be performed by specialist technical staff only.

- **CAUTION!** The electrical system to which the unit is connected must be equipped with an automatic bipolar circuit breaker. The circuit breaker for main supply voltage phase units must have a level of intervention of 20A max. The circuit breaker for low voltage units must have a level of intervention of 6A max. This circuit breaker must be of the Listed type. The minimum distance between the circuit breaker contacts must be 3mm (0.1in). The circuit breaker must be provided with protection against the fault current towards the ground (differential) and the overcurrent (magnetothermal).
- The manufacturer declines all responsibility for any damage caused by an improper use of the appliances mentioned in this manual. Furthermore, the manufacturer reserves the right to modify its contents without any prior notice. The documentation contained in this manual has been collected and verified with great care. The manufacturer, however, cannot take any liability for its use. The same thing can be said for any person or company involved in the creation and production of this manual.
- Before starting any operation, make sure the power supply is disconnected.
- Be careful not to use cables that seem worn or old.
- Never, under any circumstances, make any changes or connections that are not shown in this handbook. Improper use of the appliance can cause serious hazards, risking the safety of personnel and of the installation.
- Use only original spare parts. Non-original spare parts could cause fire, electrical discharge or other hazards.

- Comply with all the national standards during the device installation.
- This device was designed to be permanently secured and connected on a building or on a suitable structure. The device must be permanently secured and connected before any operation.
- Before proceeding with installation, check the supplied material to make sure it corresponds to the order specification by examining the identification labels (4.2 Product marking label, page 7).
- Any device which could be installed inside the product must comply with the current safety rules.
- If the installation is NEMA TYPE 4X, the installer must replace the cable glands of the product with NEMA TYPE 4X cable glands.
- For all connections, use cables that are able to withstand temperatures of at least 75°C (167°F).
- The product is designed to house only cameras that are properly certified according to IEC/UL 60950-1 or IEC/UL 62368-1 (7W max).
- A power disconnect device must be included in the electrical installation, and it must be very quickly recognizable and operated if needed.
- To connect the power supply line use the appropriate junction-box (UPTJBUL). For further information, refer to the product use and installation manual.
- Use Listed tube crimping lugs for the connection of the network conductors to the terminals. The copper tube crimping lugs must be suitable for the type of installation (from -20°C (-4°F) a +80°C (+176°F) min., V-0). Copper tube crimping lugs examples: RP, BP o YP (Cembre).
- Installation category (also called Overvoltage Category) specifies the level of mains voltage surges that the equipment will be subjected to. The category depends upon the location of the equipment, and on any surge voltage protection provided. Equipment in an industrial environment, directly connected to major feeders/short branch circuits, is subjected to Installation Category III. If this is the case, a reduction to Installation Category II is required. This can be achieved by use of an insulating transformer with an earthed screen between primary and secondary windings, or by fitting UL listed Surge Protective Devices (SPDs) from live to neutral and from neutral to earth. Listed SPDs shall be designed for repeated limiting of transient voltage surges and the following rated operation conditions: Type 2 (SPDs permanently connected to the power network and intended for installation on the load side of the service equipment); Nominal Discharge Current (In) 20kA min. For example: FERRAZ SHAWMUT, STT2240SPG-CN, STT2BL240SPG-CN rated 120Vac/240Vac, (In=20kA). Maximum distance between installation and reduction is 5m.

4 Identification

4.1 Product description and type designation

4.1.1 VERSO

Sturdy, tamper-proof housing designed to simplify installation and service and guarantee total protection against all environmental conditions.

Its dimensions make it suitable for a variety of combinations of cameras and lenses.

Entirely constructed from technopolymer, it guarantees high impact resistance and perfect weather protection from external agents and UV rays.

Very easy to install thanks to the side-opening system that allows the full access to the camera, lenses and all internal connections.

The housing proposes various mounting options, wall or ceiling brackets, feedthrough and non-feedthrough, or Pan & Tilt head.

4.1.2 VERSO COMPACT

Entirely constructed from technopolymer, it guarantees high impact resistance and perfect weather protection from external agents and UV rays.

4.1.3 VERSO POLAR

This housing is provided with a high performance heating system which it will continue working at even the most severe temperatures, right down to -55°C (-67°F).

4.2 Product marking label

See the label attached to the product.

5 Preparing the product for use



Any change that is not expressly approved by the manufacturer will invalidate the warranty.

5.1 Unpacking

When the product is delivered, make sure that the package is intact and that there are no signs that it has been dropped or scratched.

If there are obvious signs of damage, contact the supplier immediately.

When returning a faulty product we recommend using the original packaging for shipping.

Keep the packaging in case you need to send the product for repairs.

5.2 Contents

Check the contents to make sure they correspond with the list of materials as below:

- Housing
- Housing equipment:
 - Allen wrench
 - Spacers
 - Cable glands gaskets
 - Cable glands (x3)
 - Bolts and screws
 - Screws for camera
- Instruction manual

5.3 Safely disposing of packaging material

The packaging material can all be recycled. The installer technician will be responsible for separating the material for disposal, and in any case for compliance with the legislation in force where the device is to be used.

5.4 Preparatory work before installation

5.4.1 Mounting the bracket



The product must be fastened with suitable equipment. The fastening means must guarantee mechanical sealing when a force equal to at least 4 times the weight of the device is applied.

6 Installation

6.1 Housing opening

Loosen the 2 screws on the side, turn the cover and the upper half of the body about the opening hinge axis.

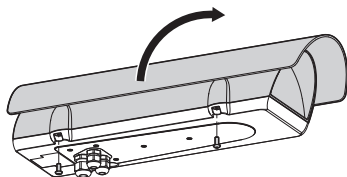


Fig. 1



After installation and wiring, close the product.

6.2 How to install the camera

Open the housing as described in the relative chapter (6.1 Housing opening, page 9).

Partially loosening the fastening screws (01).

Remove the internal slide (02) by sliding it until the holes coincide with the slide fastening screws.

Fasten the camera with the 1/4" screw (03). To position the camera and lens correctly, if necessary, use the supplied spacers. (04).

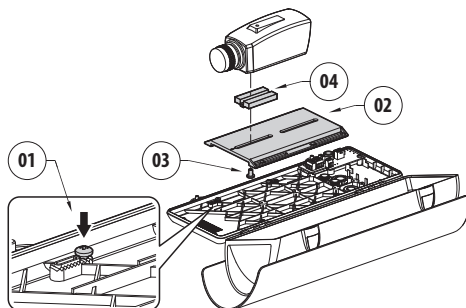


Fig. 2

Reposition the internal slide and tighten the screws that had been loosened previously.

Remove the conductors protective sheathing and connect them to terminal (camera power supply, 6.3 Board description, page 10).

The camera's power supply cable conductors must be tied up with a cable tie next to the terminal. Keep the signalling and power supply cables separated from each other.

6.3 Board description



Connect the safety earth to the relative terminal of the power supply connector.



The board may appear different to that illustrated.



Depending on the product version, the board may not be equipped with all functions.

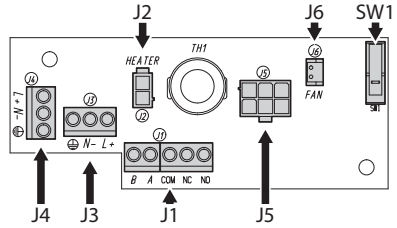


Fig. 3 VERSO.

BOARD DESCRIPTION (VERSO, VERSO COMPACT)

Con- nec- tor	Function	Notes
J1	Camera power supply (V_{out})	Depending on the power supply model the two connectors have different use. If powered in 12vdc connector A corresponds to polarity +, while connector B corresponds to polarity - . If powered in 24vac connectors A and B are equivalent and correspond to the voltage V_{ac} .
	Tamper switch contacts	Only some models
J2	Heater power supply	
J3	Power supply for the board (V_{in})	
J4	Auxiliary output (V_{out})	Same voltage applied on J3
J5	Power supply connector/jumper	Jumper present only in ventilated models
J6	Fan power supply	
SW1	Tamper switch	Only some models

Tab. 1

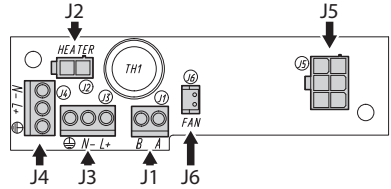


Fig. 4 VERSO COMPACT.

BOARD DESCRIPTION (VERSO, VERSION WITH DOUBLE FILTER FOR AIR RENEWAL)

Con- nec- tor	Function	Notes
J1	Power supply for the board (V_{IN})	
J2	Auxiliary output (V_{OUT})	Same voltage applied on J1
J3	Heater power supply	
J4	Tamper switch contacts	Only some models
J5	Camera power supply (V_{OUT})	Depending on the power supply model the two connectors have different use. If powered in 12vdc connector A corresponds to polarity +, while connector B corresponds to polarity - . If powered in 24vac connectors A and B are equivalent and correspond to the voltage Vac.
J7	Power supply connector/jumper	Jumper present only in ventilated models
J8	Fan power supply	
SW1	Tamper switch	Only some models

Tab. 2

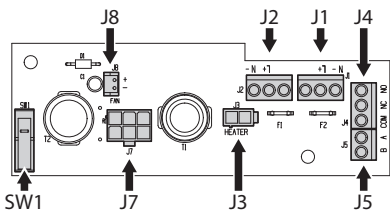


Fig. 5 VERSO (version with double filter for air renewal).

BOARD DESCRIPTION (VERSO POLAR)

Con- nec- tor	Function	Notes
J1, J2, J3	Heater power supply	
J6	Camera power supply (V_{OUT})	
J7	Power supply for the board (V_{IN})	Depending on the power supply model the two connectors have different use. If powered in 12vdc connector A corresponds to polarity +, while connector B corresponds to polarity - . If powered in 24vac connectors A and B are equivalent and correspond to the voltage Vac.
J8	Power supply connector /jumper	Only available in 12V Dc / 24 Vac versions
J10	Auxiliary output (V_{OUT})	Same voltage applied on J7

Tab. 1

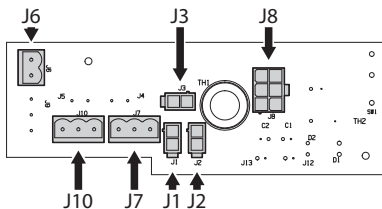


Fig. 6 VERSO POLAR.

6.4 Connecting the power supply



Earth cable should be about 10mm longer than the other two, so that it will not be disconnected accidentally if pulled.

Insert the cables inside the housing using the cable glands. The cable glands are suitable for conductors with diameters of between 5mm and 10mm. The section of the cable inside the housing must be sufficiently long to allow connection. Suitably lock the cable glands.

Remove the conductors protective sheathing and connect them to terminal (Power supply for the board, 6.3 Board description, page 10).

6.4.1 Type of cable

The cable used for the connection to the power supply line must be suitable for the intended use. Comply with the current national standards on electrical installations.

6.5 Installation of the version with double filter for air renewal



During installation pay attention to the orientation of the air inlet filter fins.

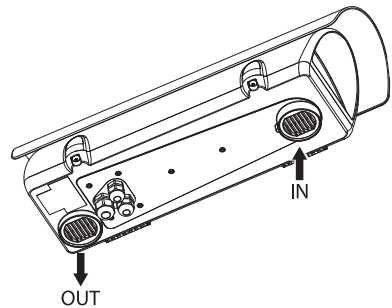


Fig. 7

Depending on the angle of inclination of the housing, the orientation of the filter fins must prevent water penetrating in case of rain:

To guarantee weatherproof protection, install the housing on the support following the inclination limits as shown in the picture.

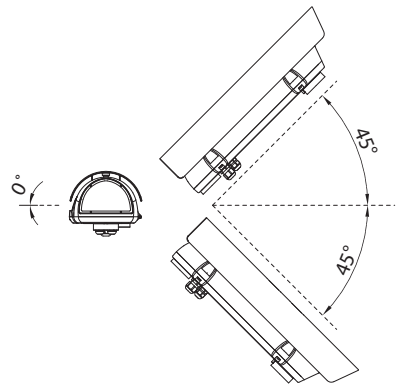


Fig. 8 Maximum tilt of the transversal axis: 0°.
Maximum tilt of the longitudinal axis: $\pm 45^\circ$.

6.6 Desiccant bag

Take the desiccant salt bag out of its pack and insert it into the product.

7 Accessories

i For further details on configuration and use, refer to the relative manual.

7.1 Heater

7.1.1 Heater installation

Open the housing as described in the relative chapter (6.1 Housing opening, page 9).

Fix the heater kit to the prearranged points on the body of the housing.

The pre-wired heating element (01) should be positioned between the 2 dissipators (02) before attachment to ensure contact and hence guarantee correct heat transmission.

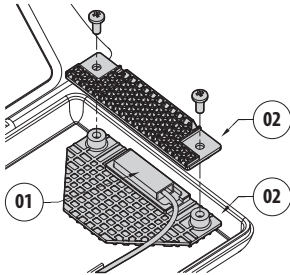


Fig. 9

Pass the heating wiring into the provided seatings.

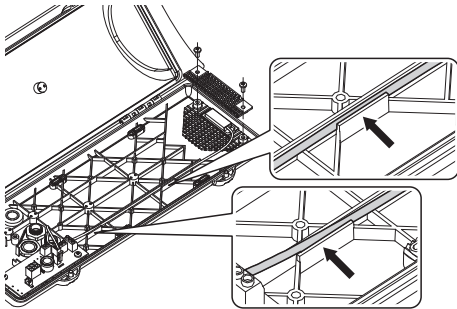


Fig. 10

Reposition the internal slide and tighten the screws that had been loosened previously.

7.2 Camera power supply

7.2.1 Camera power supply installation

! Pay attention to the voltage used to power the circuit. Depending on requirements use the correct power supply kit.

Usable power supplies:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT 12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

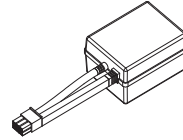


Fig. 11 Camera power supply.

Open the housing as described in the relative chapter (6.1 Housing opening, page 9).

Position the camera power supply in the provided seating, parallel to the support ribs. Fix the power supply to the body of the housing using the corner bracket and screws supplied in the camera power supply kit.

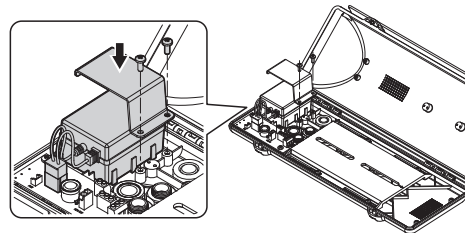


Fig. 12

At the end of installation, connect the wiring to the terminal (power supply connector, 6.3 Board description, page 10).

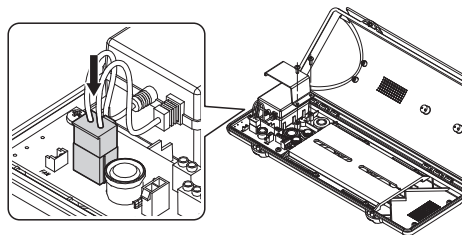


Fig. 13

7.3 Blower

7.3.1 Blower installation

⚠ Not usable in versions with double filter for air renewal.

⚠ Pay attention to the voltage used to power the circuit. Depending on requirements use the correct power supply kit.

⚠ The blower kit should be assembled according to the instructions to ensure a correct air circulation inside the housing.

Open the housing as described in the relative chapter (6.1 Housing opening, page 9).

Fix the blower using the corner bracket and screws.

The VERSO housing is provided with a single installation location for the blower (01). In VERSO COMPACT housing you can choose between two different installation locations (02).

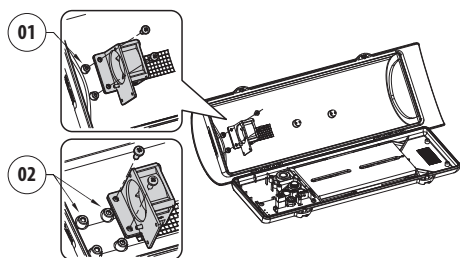


Fig. 14

8 Cleaning

8.1 Cleaning the window and plastic parts

⚠ Avoid ethyl alcohol, solvents, hydrogenated hydrocarbide, strong acid and alkali. Such products may irreparably damage the surface.

We recommend using a soft cloth with neutral soap diluted with water or specific products to clean the lenses.

9 Information on disposal and recycling

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) mandates that these devices should not be disposed of in the normal flow of municipal solid waste, but they should be collected separately in order to optimize the recovery stream and recycling of the materials that they contain and to reduce the impact on human health and the environment due to the presence of potentially hazardous substances.

♻ The symbol of the crossed out bin is marked on all products to remember this.

The waste may be delivered to appropriate collection centers, or may be delivered free of charge to the distributor where you purchased the equipment at the time of purchase of a new equivalent or without obligation to a new purchase for equipment with size smaller than 25cm (9.8in).

For more information on proper disposal of these devices, you can contact the responsible public service.

10 Technical data

10.1 VERSO

10.1.1 General

Made of strong technopolymer (polycarbonate)

Sunshield in ABS

RAL9002 Colour

Stainless steel external screws

10.1.2 Mechanical

Internal usable dimensions (WxH): 70x70mm
(2.7x2.7in)

Internal usable length (with or without accessories):
270mm (10.6in)

Cable glands: 3xM16

Polycarbonate window (WxH): 105x64mm (4.1x2.5in)

Unit weight: 1.5kg (3.3lb)

10.1.3 Electrical

Supply voltage/Current consumption (empty version):

- From 12Vdc up to 24Vdc, 1A max
- From 12Vac up to 24Vac, 1A max, 50/60Hz
- From 120Vac up to 230Vac, 400mA max, 50/60Hz

Supply voltage/Current consumption (version with heater, Ton 15°C±3°C (59°F ±5°F), Toff 22°C±3°C (72°F±5°F)):

- From 12Vdc up to 24Vdc, 5A max
- From 12Vac up to 24Vac, 5A max, 50/60Hz
- From 120Vac up to 230Vac, 700mA max, 50/60Hz

Supply voltage/Current consumption (version with heater fan assistant, continuous duty):

- 12Vdc, 400mA max
- 24Vac, 200mA max, 50/60Hz
- From 100Vac up to 240Vac, 40mA max, 50/60Hz (with wide-range power supply)

Supply voltage/Current consumption (version with blower and thermostat for models with double filter for air renewal, Ton 35°C±3°C (95°F±5°F), Toff 20°C±3°C (71°F±5°F)):

- 12Vdc, 400mA max
- 24Vac, 200mA max, 50/60Hz

Camera power supply:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT 12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

10.1.4 Environment

For indoors and outdoors installation

Operating temperature (with heater): From -20°C (-4°F) up to +60°C (140°F)

Chemical agents resistance

- High resistance: basics, alcohols, gas, hydrocarbon
- Good resistance: Organic acids, inorganic acids, oils
- Low resistance: Solvents

10.1.5 Certifications

Electrical safety (CE): EN60950-1, IEC60950-1, EN62368-1, IEC62368-1

Electromagnetic compatibility (CE): EN50130-4, EN61000-6-3, EN55032 Class B, FCC Part. 15 Class B, ICES-003 Class B

Outdoor installation (CE): EN60950-22, IEC 60950-22

IP protection degree (EN60529):

- IP66/IP67 (with cable glands)
- IP66/IP67 (with bracket with internal cable channel, with sealing rings)
- IP55 (with bracket with internal cable channel)
- IP44 (for models with a double filter for air renewal)

IK protection degree (EN62262): IK10

UL certification:

- cULus Listed, TYPE 4X (except for versions with double filter for the air exchange)
- UL94, V1 (fire-self extinguish)

EAC certification

10.2 VERSO COMPACT

10.2.1 General

Made of strong technopolymer (polycarbonate)

Sunshield in ABS

RAL9002 Colour

Stainless steel external screws

10.2.2 Mechanical

Internal usable dimensions (WxH): 63x63mm (2.5x2.5in)

Internal usable length (with or without accessories): 210mm (8.3in)

Cable glands: 2xM16

Polycarbonate window (WxH): 98x55mm (3.9x2.2in)

Unit weight: 1.1kg (2.2lb)

10.2.3 Electrical

Supply voltage/Current consumption (empty version):

- From 12Vdc up to 24Vdc, 1A max
- From 12Vac up to 24Vac, 1A max, 50/60Hz
- From 120Vac up to 230Vac, 400mA max, 50/60Hz

Supply voltage/Current consumption (version with heater, Ton 15°C±3°C (59°F ±5°F), Toff 22°C±3°C (72°F±5°F)):

- From 12Vdc up to 24Vdc, 5A max
- From 12Vac up to 24Vac, 5A max, 50/60Hz
- From 120Vac up to 230Vac, 700mA max, 50/60Hz

Supply voltage/Current consumption (version with heater fan assistant, continuous duty):

- 12Vdc, 400mA max
- 24Vac, 200mA max, 50/60Hz
- From 100Vac up to 240Vac, 40mA max, 50/60Hz (with wide-range power supply)

Camera power supply:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT 12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

10.2.4 Environment

For indoors and outdoors installation

Operating temperature (with heater): from -20°C (-4°F) up to +60°C (140°F)

Chemical agents resistance

- High resistance: basics, alcohols, gas, hydrocarbon
- Good resistance: Organic acids, inorganic acids, oils
- Low resistance: Solvents

10.2.5 Certifications

Electrical safety (CE): EN60950-1, IEC60950-1, EN62368-1, IEC62368-1

Electromagnetic compatibility (CE): EN50130-4, EN61000-6-3, EN55032 Class B, FCC Part. 15 Class B, ICES-003 Class B

Outdoor installation (CE): EN60950-22, IEC 60950-22

IP protection degree (EN60529):

- IP66 (with cable glands)
- IP66 (with bracket with internal cable channel, with sealing rings)

IK protection degree: EN62262, IK10

UL certification:

- cULus Listed, TYPE 4X
- UL94, V1 (fire-self extinguish)

EAC certification

10.3 VERSO POLAR

10.3.1 General

Made of strong technopolymer (polycarbonate)

Sunshield in ABS

RAL9002 Colour

Stainless steel external screws

10.3.2 Mechanical

Internal usable dimensions (WxH): 70x70mm
(2.7x2.7in)

Internal usable length (with or without accessories):
270mm (10.6in)

Cable glands: 3xM16 (nickel-plated brass for external
connections)

Polycarbonate window (WxH): 105x64mm (4.1x2.5in)

Unit weight: 1.5kg (3.3lb)

10.3.3 Electrical

Supply voltage/Current consumption (version with
heater, Ton 15°C±3°C (59°F ±5°F), Toff 22°C±3°C
(72°F±5°F)):

- From 12Vdc up to 24Vdc, 5A max
- From 12Vac up to 24Vac, 5A max, 50/60Hz
- From 120Vac up to 230Vac, 700mA max, 50/60Hz

Camera power supply:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT
12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

10.3.4 Environment

For indoors and outdoors installation

Operating temperature (with heater): From -55°C
(-67°F) up to +60°C (140°F)

Chemical agents resistance

- High resistance: basics, alcohols, gas,
hydrocarbon
- Good resistance: Organic acids, inorganic acids,
oils
- Low resistance: Solvents

10.3.5 Certifications

Electrical safety (CE): EN60950-1, IEC60950-1,
EN62368-1, IEC62368-1

Electromagnetic compatibility (CE): EN50130-4,
EN61000-6-3, EN55032 Class B, FCC Part. 15 Class B,
ICES-003 Class B

Outdoor installation (CE): EN60950-22, IEC 60950-22

IP protection degree (EN60529):

- IP66 (with cable glands)
- IP66 (with bracket with internal cable channel,
with sealing rings)
- IP55 (with bracket with internal cable channel)

IK protection degree: EN62262, IK10

UL certification:

- cULus Listed, TYPE 4X
- UL94, V1 (fire-self extinguish)

EAC certification

11 Technical drawings



The indicated measurements are expressed in millimetres.

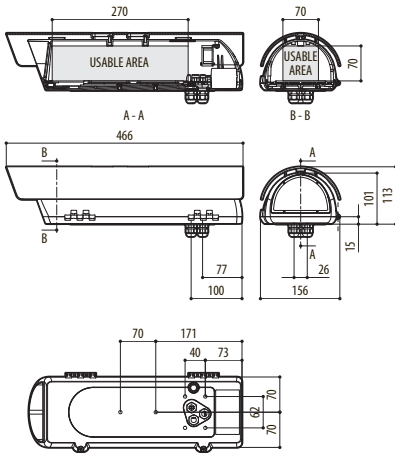


Fig. 15 VERSO.

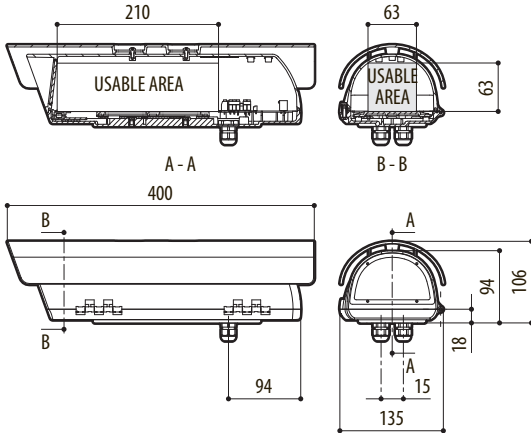


Fig. 16 VERSO COMPACT.

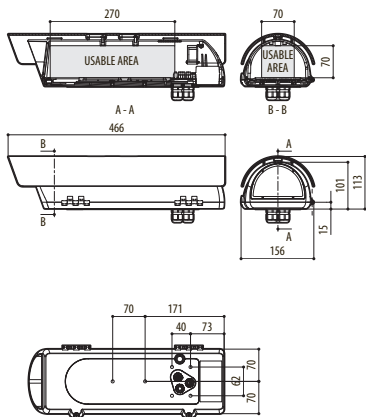


Fig. 17 VERSO POLAR.



Headquarters Italy VIDEOTEC s.r.l.
Via Friuli, 6 - I-36015 Schio (VI) - Italy
Tel. +39 0445 697411 - Fax +39 0445 697414
Email: info@videotec.com
www.videotec.com

MNVCHPVB_2222_EN